

PG-9068说明书 80g米黄色特种纸,双面折页 尺寸: 630x142mm

正面

iPega® 战斧蓝牙手柄

产品说明书(PG-9068)中文版

适用说明:

- 1.非常感谢您购买iPega公司开发生产的战斧蓝牙手柄;
- 2.产品主要适用于Android/OS/Win 7/8/10系统上蓝牙连接时,进行游戏操作时使用;
- 3.适用设备:智能手机/平板电脑/智能电视机、机顶盒/PC电脑;
- 4.L/T为模拟量功能,更加注重操作时的细节,使游戏精准可控!
- 5.带Turbo功能键,在游戏操作时功能更加强大,快捷!
- 6.在鼠标模式下,带多媒体功能:音量+/播放/暂停/上一曲/下一曲;
- 7.本产品只配充电线,如需使用PC有线功能,需用USB数据线连接;

* 因官方游戏平台软件升级或源代码变更等不可抗拒的因素造成部分游戏无法与本产品连接操作,我公司不负任何责任。对此我公司保留最终解释权。

售后客服QQ群: 144981572
客服电话: 400-806-3006
在线时间: 周一至周五 10:00-17:30

功能按键图示:

安卓设备使用说明:

iOS游戏大厅模式:

有线连接PC设备的操作方法:

Turbo功能:

- 1.Turbo功能设定: 先按住要加速的功能键例如: A键, 再按住Turbo键, 此时A键具有加速连打功能;
- 2.Turbo功能取消: 先按住已经设置加速的功能键, 例如A键, 再按住Turbo键, 此时A键的加速连打功能就取消了;

多媒体功能:

- 1.多媒体功能, 需在鼠标模式下进行操作, 可控制音乐播放;
- 2.设备与手柄配对成功后, 短按 **△** 键可切换至鼠标模式; 此时LED2灯亮;
- 3.在鼠标模式下, 各按键功能如下(以Windows系统为例): Y键: 音量+; A键: 音量-; X键: 上一曲; B键: 下一曲; L2键: 播放/暂停; R1键: 鼠标左键; R2键: 鼠标右键; 左3D: 鼠标快移动; 右3D: 鼠标慢移动;
- 4.如需切回游戏模式请短按 **△** 键。

注意事项:

- 1.请不要把本产品放在潮湿或高温地方存储;
- 2.不要敲击、摔打、刺穿、或试图去分解本产品, 以免对产品造成不必要的损害;
- 3.产品内置电池, 请勿和垃圾一起丢弃。
- 4.不要在靠近火或其它热源的地方对手柄进行充电。
- 5.非专业人员请勿拆卸本产品, 否则不在售后保修服务内;

电性参数:

1.工作电压: DC3.7V	5.充电电压/电流: DC5V/500mA
2.工作电流: 30 mA	6.蓝牙传输距离: ≤8M
3.持续使用时间: 10H	7.电池容量: 350mAh
4.静态电流: <35uA	8.待机时间: 满电放置30天

常见问题:

问: 为什么在iOS手机“App Store”里下载的游戏用手柄操控不了?
答: 因iOS的协议限制, iOS的游戏需要在游戏平台上下载, 平台内的游戏跟手柄配对过。(之前已经下载过的游戏要卸载, 以免有冲突)。

问: 游戏时按压不受控, 或混乱怎么办?
答: 将手柄重新连接, 连接过程中请不要触碰其它按键。

问: 手机蓝牙打开无法搜索到手柄?
答: 1. 取消掉手柄与手机之前的蓝牙配对设备名, 重新开启手机蓝牙搜索配对;
2. 使用回形针按下手柄背面的复位孔。

问: 新手柄为什么不开机?
答: 1. 新手柄一般电量不足, 请用包装盒内的USB线接上5V充电器, 给手柄充电, 充满电后再按开机键开机。
2. 如果手柄接上电源(SV)后指示灯还是不亮, 请用回形针按下手柄背面的复位孔。

操作使用模式:

Android 系统		
	安卓标准游戏模式	鼠标模式
模式配对(长按2秒)	Android+△键	安卓连接模式下按△键切换
指示灯	LED1	LED2
备注	在安卓连接模式下, 可以通过短按△键切换到鼠标模式	

iOS 系统		Windows系统	
	iOS游戏大厅模式	USB有线模式	蓝牙连接模式
模式配对(长按2秒)	NEW+△键	按住Start上电	Android+△键
指示灯	LED3	LED(随机)	LED1
备注	支持iOS非越狱设备	需USB数据线	需蓝牙适配器

配件清单:

- 游戏手柄 x1
- 说明书 x1
- 充电线 x1(仅限于充电, 不带有数据传输功能)

iPega与ePega商标同属于PEGA LIMITED所有.

专利号: ZL201630512617.1

反面

iPega® Tomahawk Bluetooth GamePad

Item Code: PG-9068

Applicable instructions:

- 1.Thanks for purchasing iPega developed Tomahawk Bluetooth GamePad.
- 2.This Gamepad support playing games on Bluetooth enabled Android 3.2v+ tablet/ smart phone/ TV box/ smart TV/ VR, Win7/ Win8/ Win10/ Win PC without any drivers.
- 3.LT button and RT button have simulator function, much more focus on operating details, making the games much more precise and easier to control.
- 4.Support TURBO(acceleration) function, make it stronger and more fast when playing games.
- 5.Multimedia player buttons "volume +, -", "last", "next" "Play / Pause" can be used under mouse mode.

* Due to the official game platform software upgrades or source code changes and other non-resist factors caused some of the game can not be played or connected with our Gamepad, iPega company has no responsibility. iPega reserve the right of final interpretation for this.

*** iOS devices (iPhone/iPad) has authorization limited, so currently for Chinese user only.**

Introduction for key functions:

Usage of Android device:

How to wired connect PC device for playing by using USB data cable:

The USB cable included in the package is charge cable, need buy data cable for wired connection.

- 1.USB cable is required to connect the USB port of the PC device with the gamepad after pressed START button. When WIN7 or above system is connected by default, the indicator light is on, and showing the operation mode of X-INPUT.
- 2.In X-INPUT wired mode, it can support the operation of vast majority of classic large-scale games in PC version. Such as: Need for Speed

Turbo Function:

- 1.Enabling of Turbo Function: First, press the key that needs the turbo function, for example, A key, then press and hold Turbo key. At this moment, A key will be enabled with Turbo function.
- 2.Disabling of Turbo function: First, press the key that has been set up with the Turbo function, for example,A key, then press and hold Turbo Key. At this moment, Turbo function in A key will be disabled.

Multimedia Function:

- 1.The multimedia function will only operate under the mouse mode.
- 2.When the connection is successful under the HID mode, it can toggle to the mouse mode by pressing **△** key for a short period; at this moment, the LED2 will be on.
- 3.In the mouse mode: Y key: Volume+; A key: Volume-; X key: Previous song; B key: Next song; L2 key: Play back/ Pause; L1 key: Left mouse key; R2 key: Play back/ Pause; R1 key: Right mouse key.

Charge/ Sleep/ Wake up function of Gamepad:

- 1.When the gamepad is not connected to any device while charging, 4 LED indicator lights will slowly blink at the same time, and will be off after fully charged. When the gamepad is connected to other device via Bluetooth while charging, the current mode indicator will slowly blink, and will be on all the time after fully charged.
- 2.Sleep/Fast sleep function: Gamepad will enter into sleeping mode if not used for 5 minutes, and press **△** button for wake up and reconnect automatically.
- 3.Current mode indicator will flash quickly for low battery remind.

Operation instructions:

Android system		
	HID Mode(GamePad)	Mouse Mode
Bluetooth pairing buttons (Press and hold on 2's)	Android+△	Press △ button to switch from HID mode to mouse mode
Indicator	LED1	LED2
Remark	Press △ button to switch to mouse mode from HID mode	

Windows system		
	D-input Mode	USB Wired mode
Bluetooth pairing buttons (Press and hold on 2's)	Android+△	Press START button to power on
Indicator	LED1	LED(random)
Remark	Need buy a USB Bluetooth4.0 receiver	Need buy a USB data cable

Accessories List:

- Gamepad x1
- User Manual x1
- Micro USB Charging Cable x1 (Only for charge, without data transmission function)

iPega and ePega trademarks all belong to PEGA LIMITED.

Patent NO.: ZL201630512617.1