



 
糖果派迷你手柄

产品说明书(PG-9193)

产品适用说明:

1. 本手柄适合操作N·S/P3/安卓(支持安卓6.0以上) Steam及PC电脑(Win 7以上系统)设备上的游戏。
 2. 本手柄小巧精致, 可做挂饰件, 携带方便, 随手可玩游戏, 兼容支持市场上主流游戏设备, 可玩性高。
 3. 本手柄支持六轴及震动功能, 使玩家得到更好的游戏体验。
 4. 结构符合人体工程学, 手感舒适。
 5. 手柄的十字键功能默认为左3D摇杆功能, 通过同时按下Y+X键2S切换到十字键的功能, 同时按下十字键下键和SELECT键, 相当于HOME键功能; 同时按下SELECT和START键相当于同时按下手柄的ZL和ZR键功能
- * 因官方游戏平台软件升级或源代码变更等不可抗力因素造成部分游戏无法与本产品连接操作, 我公司不承担任何责任, 对此我公司保留最终解释权。

功能按键图示

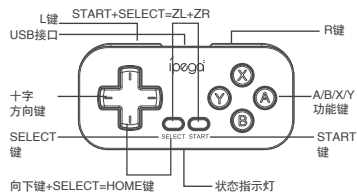

产品特性参数:

1. 工作电压: DC3.7V;
2. 工作电流: <15mA;
3. 静态电流: <10uA;
4. 持续使用时间: 约8H;
5. 输入电压/电流: DC5V/500mA;
6. 充电时间: 约2小时;
7. BT3.0, 传输距离: <=8M;
8. 电池容量: 130mAh;
9. 待机时间: 满电放置30天;

产品使用说明:

N-S主机连接:

① 首次连接手柄到主机: 打开N·S主机, 在N·S主机主界面, 用手指触摸点击: 手柄 → 更改握法/顺序, 进入到主机配对模式界面;

 
在手柄关机状态下, 长按A+START组合键2秒开启手柄并进入配对模式, 手柄上的绿色LED灯开始快速循环闪烁, 当手柄与主机 配对成功后, 绿灯LED长亮, 然后按 A 键操作。

② 已成功连接: 长按START键2秒开启手柄, 手柄与主机自动连接, 然后按A键进行操作。开机状态下长按START键3S关机

③ 同时按下十字键下键和SELECT, 等同于HOME键功能。同时按下SELECT和START键相当于同时按下手柄的ZL和ZR键功能。


④ N·S主机游戏模式下, 支持六轴及震动功能。

⑤ 唤醒手柄: 在手柄睡眠状态下, 短按START键唤醒手柄, 手柄与主机自动回连, 然后按A键进行操作。



安卓设备连接(安卓标准HID模式):

 - ① 在手柄关机状态下, 长按Y+START组合键2秒开机, 手柄上的绿色LED灯开始快速循环闪烁。
- ② 当安卓手机/安卓平板/安卓智能电视搜索到PG-9193设备名时, 选择连接! 连接成功后, 手柄绿色LED灯常亮!
- ③ 唤醒手柄: 已成功连接后, 可以直接按START键, 绿色LED灯慢闪, 自动回连!
- ④ 同时按下十字键下键和SELECT, 相当于HOME键功能, 同时按下SELECT和START键等同于同时按下手柄的L2和R2键功能。




P3主机无线连接:

- ① 在手柄关机状态下, 长按A+START组合键2秒开机, 手柄绿色LED灯快速闪烁, 进入P3配对状态。
- ② 使用一条USB数据线将手柄与P3主机连接, 自动配对, 按下START键即可连接成功。
- ③ 配对成功后, 手柄的绿色LED灯常亮, 手柄进入P3模式操作。
- ④ 拔掉USB线, 手柄进入无线连接状态。
- ⑤ 同时按下十字键下键和SELECT, 相当于HOME键功能, 同时按下SELECT和START键等同于同时按下手柄的L2和R2键功能。



有线连接PC设备/智能电视/电视盒子/P3 主机:

 - ① 在手柄关机状态下, 长按L1+START组合键2秒开机, 手柄绿色LED灯开始快速循环闪烁, 进入有线状态, 此时使用一条USB数据线将手柄连接到PC电脑/安卓设备(智能电视/电视盒子) P3主机, 连接成功手柄绿色LED灯长亮。
 - ② PC有线模式下通过长按十字键下键和SELECT键2秒可切换PC Xb 360模式, 此时手柄绿色LED灯闪烁一次。
- 备注: PC/P3有线连接的模式下, 支持震动功能, 不支持六轴功能。

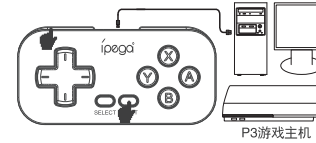

操作使用模式:

配对模式 (长按2秒)	N-S主机		安卓系统	
	N-S无线模式	安卓无线模式	安卓有线模式	安卓有线模式
	B+START	Y+START	L+START	L+START
指示灯	绿光	绿光	绿光	绿光
备注	支持震动, 六轴	不支持震动, 六轴		

游戏模式	P3主机		PC电脑
	P3无线模式	P3有线模式	PC有线模式
模式配对(长按2秒)	A+START	L1+START	L1+START
指示灯	绿光	绿光	绿光
备注	无线模式下进入搜索状态时需插USB数据线, 连接成功并接入USB线, 手柄进入无线连接		仅支持震动

 
手柄充电/休眠/唤醒/关机功能:

1. 手柄电量不足时, 绿光LED指示灯快闪提示。
2. 手柄在充电时, 绿光LED指示灯慢闪提示。
3. 手柄充满电后, 绿光LED常亮提示。
4. 睡眠/唤醒功能: 游戏手柄在5分钟内不使用会进入休眠状态, 当需要重新使用时需按START键唤醒即可回连。
5. 开机和已连接状态下, 长按START键3S关机。

注意事项:

1. 请不要把本产品在潮湿或高温地方存储。
2. 不要敲击、摔打、刺穿、或试图去分解本产品, 以免对产品造成不必要的损害。
3. 产品内置电池, 请勿和垃圾一起丢弃。
4. 非专业人员误拆即本产品, 否则不在售后维修服务内。
5. 因官方软件升级或源代码变更等不可抗力因素造成部分游戏无法与本产品连接操作, 我公司不承担任何责任, 对此我公司保留最终解释权。

产品清单

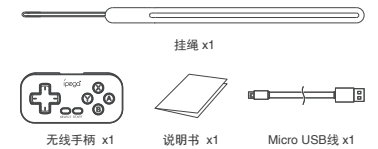


TANGO CONTROLLER

Manual(PG-9193)

Application instruction:

1. This controller is suitable for playing games on N-S/ P3/ Android / Steam and Windows PC; (Android 6.0 or above, Windows7 or above)
2. This controller is compact and exquisite, which can be used as ornaments, easy to carry, handy for playing games. Compatible with the mainstream game equipment in the market and with high playability.
3. This controller supports six-axis and vibration function, players can get better game experience.
4. Ergonomic design, feels comfortable;
5. The D-Pad function defaults to the left 3D joystick function, you can switch to the D-Pad function by pressing the "Y+X" at the same time for 2 seconds; Press "D-Pad down key + SELECT" at the same time, which is equivalent to the HOME function; Pressing "SELECT + START" simultaneously is equivalent to pressing the "ZL + ZR" simultaneously.

 Illustration of buttons

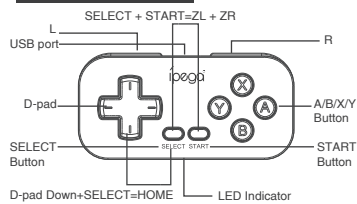

Electrical Parameters:

1. Working voltage:DC3.7V;
2. Working current: <15mA;
3. Static current: <10uA;
4. Continuous gameplay time: about 8H;
5. Input voltage/current: DC5V/500mA;
6. Charging time: about 2 hours;
7. BT 3.0, transmission distance: <= 8M;
8. Battery capacity: 130mAh;
9. Standby time: 30 days after being fully charged;

Operation instructions:

1.N-S Connection:

1. First time connect the controller with N-S: turn on the N.S console, on the main interface of N-S, click with finger: "controller" → "change Grip/ Order", enter pairing mode interface;

When the controller is off, press "B+HOME" for 2 seconds to turn on and enter pairing mode, the green LED of controller cycle flashing rapidly, when controller is successfully paired, the green LED light on, then press A to operate.

2. Connect the controller to N.S again: press HOME for 2 seconds to turn on the controller, it will connect automatically, LED keeps on, then press A to operate. Long press START for 3 seconds to shut down .

3. Pressing "D-Pad down key + SELECT" Simultaneously is equivalent to the HOME function; Pressing "SELECT + START" simultaneously is equivalent to pressing the "ZL + ZR" simultaneously.

4. In N.S game mode, six-axis and vibration functions are supported.

5. Wake up controller: In the sleep status of the controller, short press START to wake up the controller, it will connect with console automatically, then press A to operate.



2. Android Device Connection (Android HID Mode)

1. When the controller is off, long press Y+START for 2 seconds to turn on, the green LED will quick cycle flash.
2. Search BT device and select PG-9193 on Android smartphone/ tablet/ smart TV, the green LED will always be on after successful connection.
3. Wake up controller: It been connected before, you can press START directly, the green LED will flash slowly, it will connect automatically.
4. Press "D-Pad down key + SELECT" at the same time, which is equivalent to the HOME function; Pressing "SELECT + START" simultaneously is equivalent to pressing the "L2 + R2" simultaneously.



3. P3 Console Wireless Connection:

 
1. When the controller is off, long press "A+START" for 2 seconds to enter P3 pairing mode, the green LED flashes quickly.
2. Connect the controller with P3 console via a USB cable, it will automatically pair, press "START" to connect successfully.
3. After successful pairing, the green LED is always on, controller enter P3 mode.
4. Unplug the USB cable, controller will enter the wireless connection status.
5. Press "D-Pad down + SELECT" at the same time, which is equivalent to the HOME function; Pressing "SELECT + START" simultaneously is equivalent to pressing the "L2 + R2" simultaneously.



4. Wired connection of PC/Android/ P3:

1. When the controller is off, long press "L1+START" for 2 seconds to turn on, the green LED flashes rapidly and enters the wired state. Then connect the controller to PC/ Android device/ P3 console via a USB cable, the green LED will always be on after successful connection.
2. In PC wired mode, long press "D-Pad down key + SELECT" for 2 seconds to switch to PC Xb 360 mode, the green LED will flashes once.

* Remarks: In PC/P3 mode, it support vibration function, but don't support six axis function.

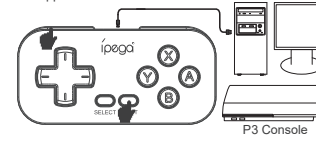

Operating Mode:

Pairing mode (long press for 2 seconds)	N·S		Android Device	
	Wireless mode	Android wireless mode	Android wired mode	Android wired mode
	B+START	Y+START	L1+START	L1+START
Indicator light	Green	Green	Green	Green
Remarks	Support six axis, vibration	Don't support six axis, vibration		

Pairing mode (long press for 2 seconds)	P3		PC
	Wireless mode	Wired mode	Wired mode
	A+START	L1+START	L1+START
Indicator light	Green		Green
Remarks	USB cable should be plugged in when entering the search state in wireless mode. When the connection is successful, unplug the USB cable and enter the wireless connection. Support vibration only.		Support vibration

Charging/sleep/wake up/ power off function:

1. Lower power, the green LED indicator will quick flash.
2. Charging, the green LED indicator flash slowly;
3. When it is fully charged, the green LED will always be on;
4. Sleep/Wake up function: controller will enter to sleep mode without operation within 5 minutes; Press "START" to wake up and reconnect when it needs to be reused;
5. Long press "START" for 3 seconds to shut down;

Notes:

1. Please do not store this product in wet or high-temperature areas.
2. Don't knap, bear, drub, pierce, or try to decompose this product, to avoid unnecessary damage to the product.
3. Non professional personnel should not disassemble the product, otherwise it will not be covered in the after-sales warranty services.
4. The products has built-in batteries, and please don't discard them together with the garbages.
5. Don't charge the controller in place near the fire or other heat source.
6. Due to the official game platform software upgrade or source code changes and other not resist factors caused of some games can not be played or connected with our gamepad. iPega has no responsibility, iPega reserves the right of final interpretation.

Accessories List

